


Parking Distance Control with Parallel Parking Assistance (Park Assist) , (7X5)

From September 2014

**Audi**


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

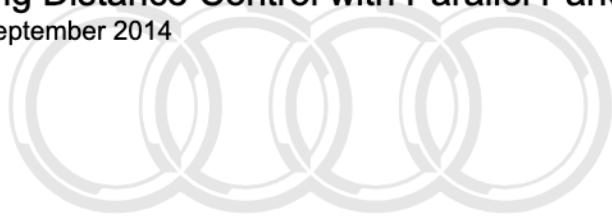

Data Bus on Board Diagnostic Interface, Parallel Parking Assistance Control Module

- J533 Data Bus on Board Diagnostic Interface
- J791 Parallel Parking Assistance Control Module
- ST1 Fuse Panel 1
- SB4 Fuse 4 (On Fuse Panel B)
- T16i 16-Pin Connector
- T32b 32-Pin Connector
- T46b 46-Pin Connector
- TV81 Instrument Cluster CAN Bus High Wire Junction 2
- TV84 Instrument Cluster CAN Bus Low Wire Junction 2

- 51 Ground Connection in Luggage Compartment, Right
- 383 Ground Connection 18 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- 389 Ground Connection 24 (in Main Wiring Harness)
- B277 Positive Connection 1 (15a) (in Main Wiring Harness)
- B708 Instrument Cluster CAN Bus High Connection 1 (in Main Wiring Harness)
- B709 Instrument Cluster CAN Bus Low Connection 1 (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Avant
- *3 Data Bus Wire (CAN Bus)

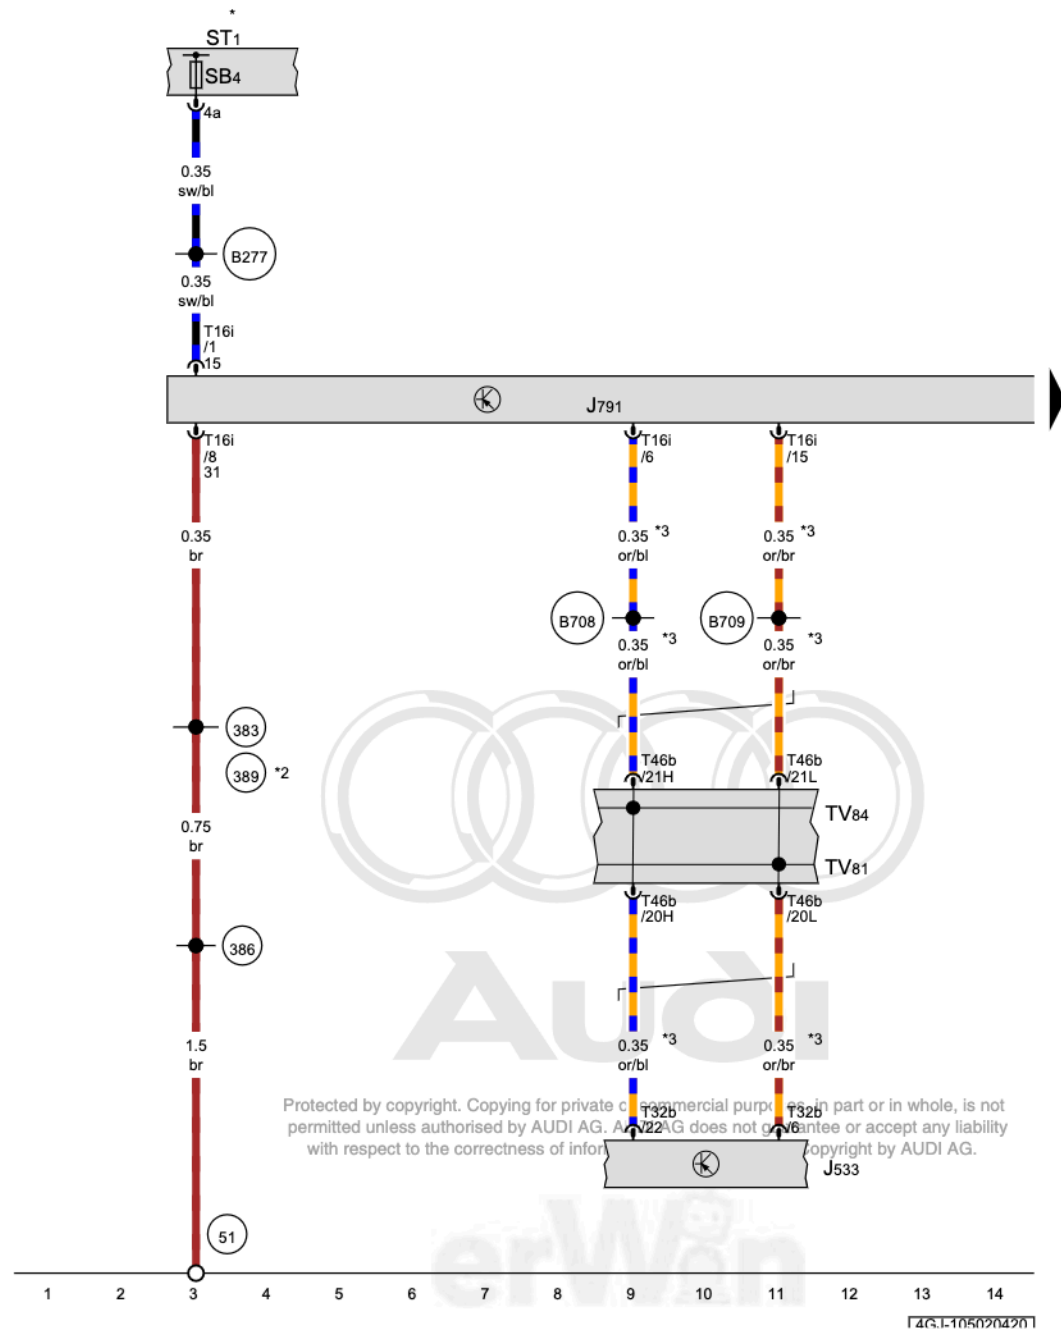



ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Parking Aid Button, Parallel Parking Assistance Button, Parallel Parking Assistance Control Module, Parking Aid Indicator Lamp, Parallel Parking Assistance Indicator Lamp

- E266 Parking Aid Button
- E581 Parallel Parking Assistance Button
- J791 Parallel Parking Assistance Control Module
- K136 Parking Aid Indicator Lamp
- K241 Parallel Parking Assistance Indicator Lamp
- T6ai 6-Pin Connector
- T10k 10-Pin Connector
- T16i 16-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- T17q 17-Pin Connector, In the Connector Station, Right A-Pillar

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)

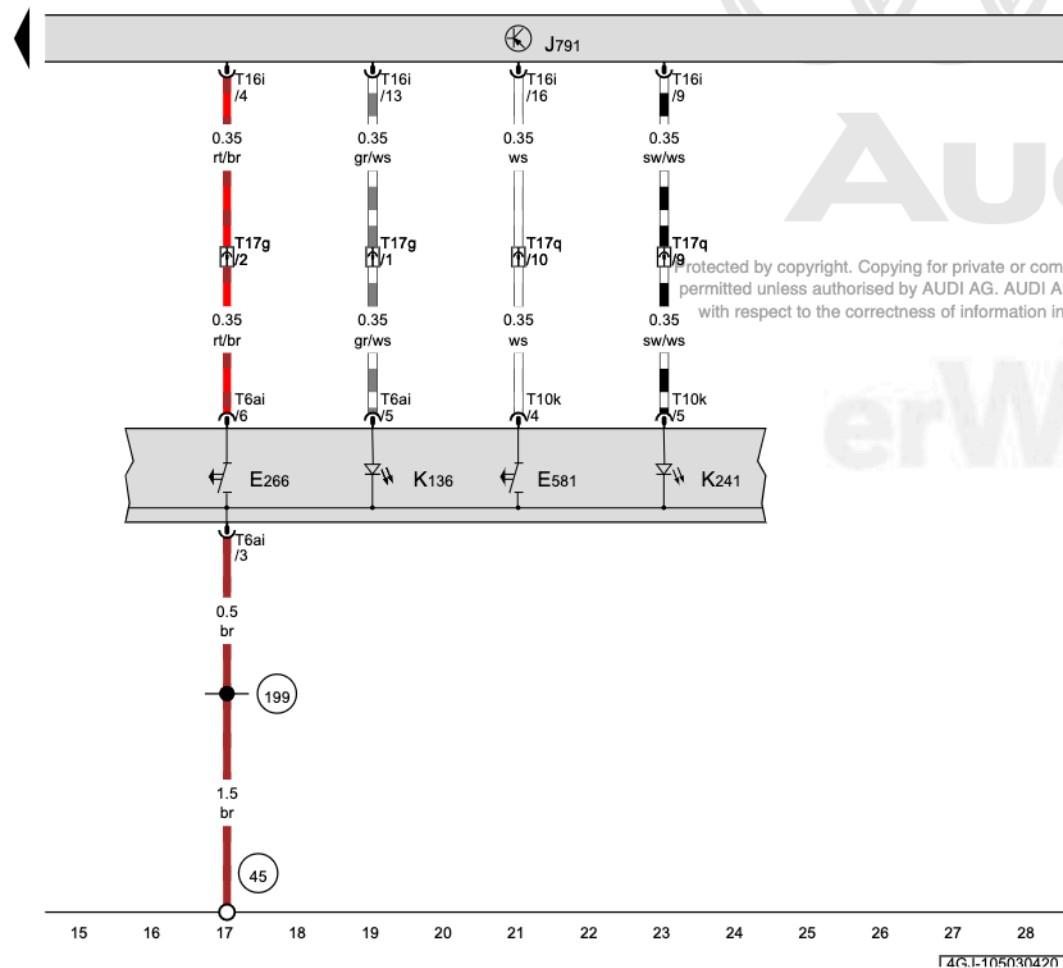

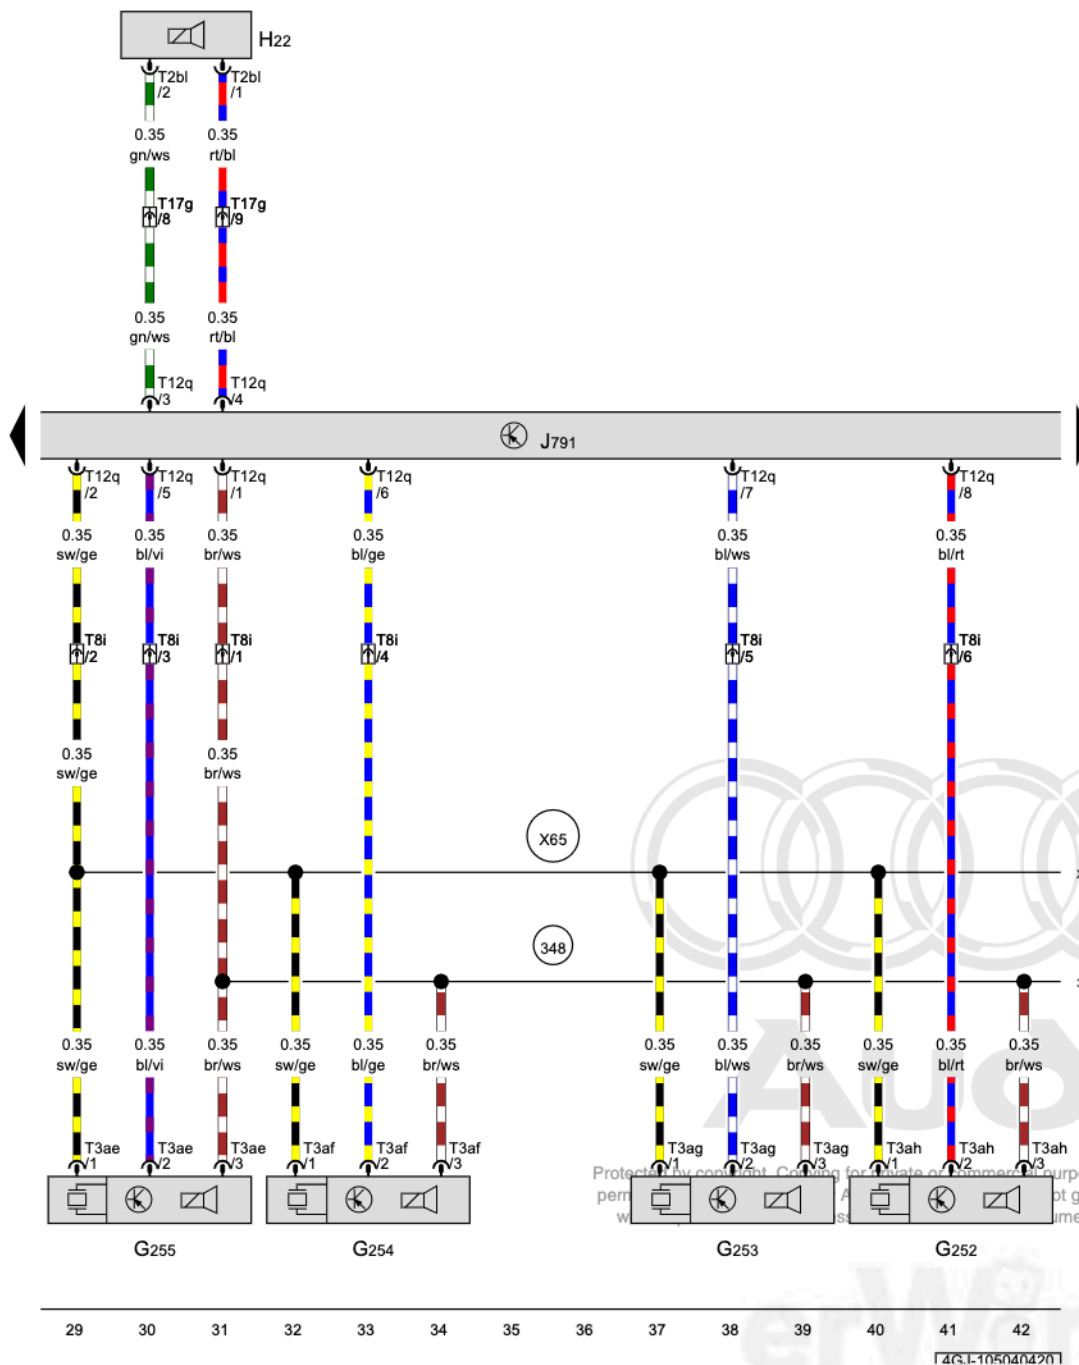


Right Front Parking Aid Sensor, Left Front Center Parking Aid Sensor, Left Front Parking Aid Sensor, Front Parking Aid Warning Buzzer, Parallel Parking Assistance Control Module

- G252 Right Front Parking Aid Sensor
- G253 Right Front Center Parking Aid Sensor
- G254 Left Front Center Parking Aid Sensor
- G255 Left Front Parking Aid Sensor
- H22 Front Parking Aid Warning Buzzer
- J791 Parallel Parking Assistance Control Module
- T2bl 2-Pin Connector
- T3ae 3-Pin Connector
- T3af 3-Pin Connector
- T3ag 3-Pin Connector
- T3ah 3-Pin Connector
- T8i 8-Pin Connector, Behind the Bumper, Left Front
- T12q 12-Pin Connector
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station
- 348 Parking Aid Ground Connection (in Front Bumper Wiring Harness)
- X65 Parking Aid Connection (in Front Bumper Wiring Harness)


Left Front Parallel Parking Assistance Sensor, Left Rear Parallel Parking Assistance Sensor, Right Rear Parallel Parking Assistance Sensor, Parallel Parking Assistance Control Module

- G568 Left Front Parallel Parking Assistance Sensor
- G569 Right Front Parallel Parking Assistance Sensor
- G716 Left Rear Parallel Parking Assistance Sensor
- G717 Right Rear Parallel Parking Assistance Sensor
- J791 Parallel Parking Assistance Control Module
- T3ai 3-Pin Connector
- T3ak 3-Pin Connector
- T3ap 3-Pin Connector
- T3aq 3-Pin Connector
- T8i 8-Pin Connector, Behind the Bumper, Left Front
- T12q 12-Pin Connector
- T12w 12-Pin Connector

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless expressly permitted by Audi AG. All rights reserved. Audi AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

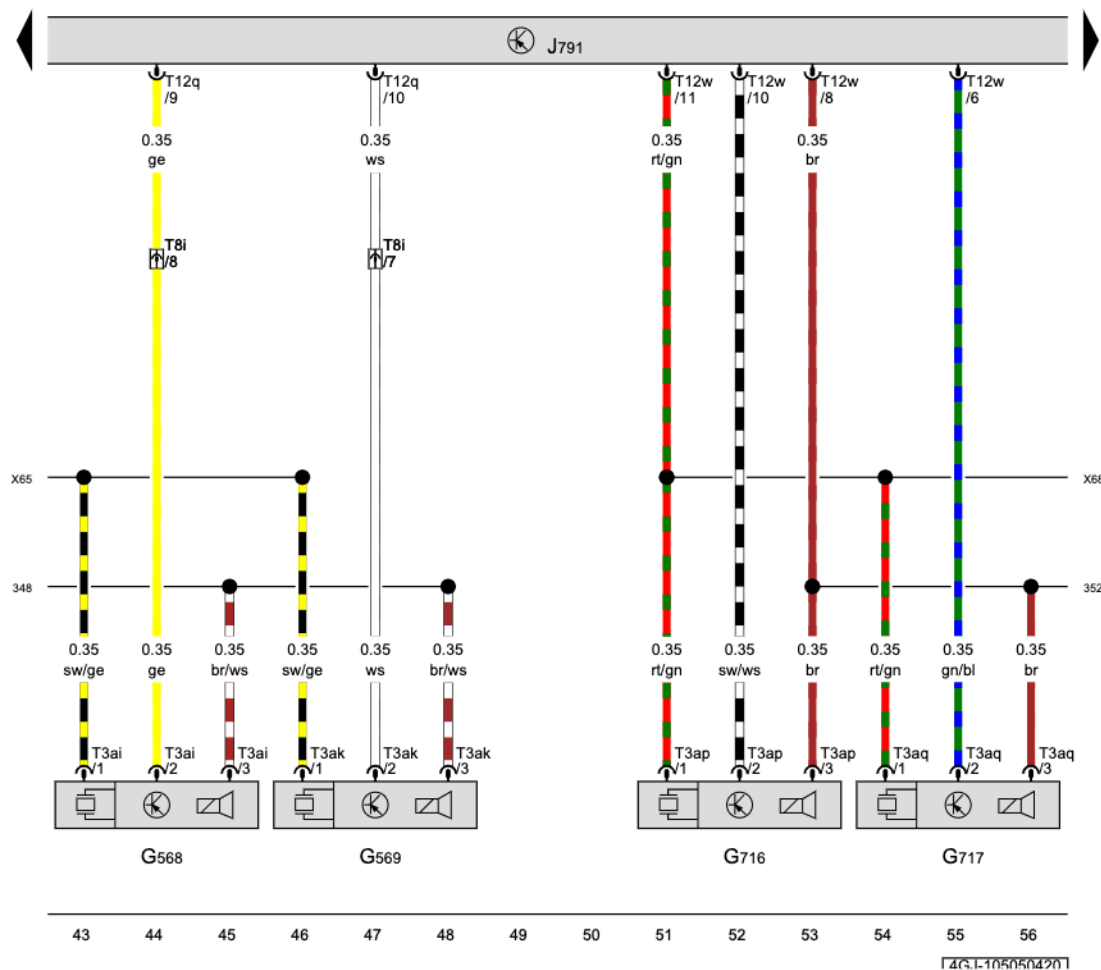

- 348 Parking Aid Ground Connection (in Front Bumper Wiring Harness)
- 352 Parking Aid Ground Connection (in Rear Bumper Wiring Harness)
- X65 Parking Aid Connection (in Front Bumper Wiring Harness)
- X68 Parking Aid Connection (in Rear Bumper Wiring Harness)

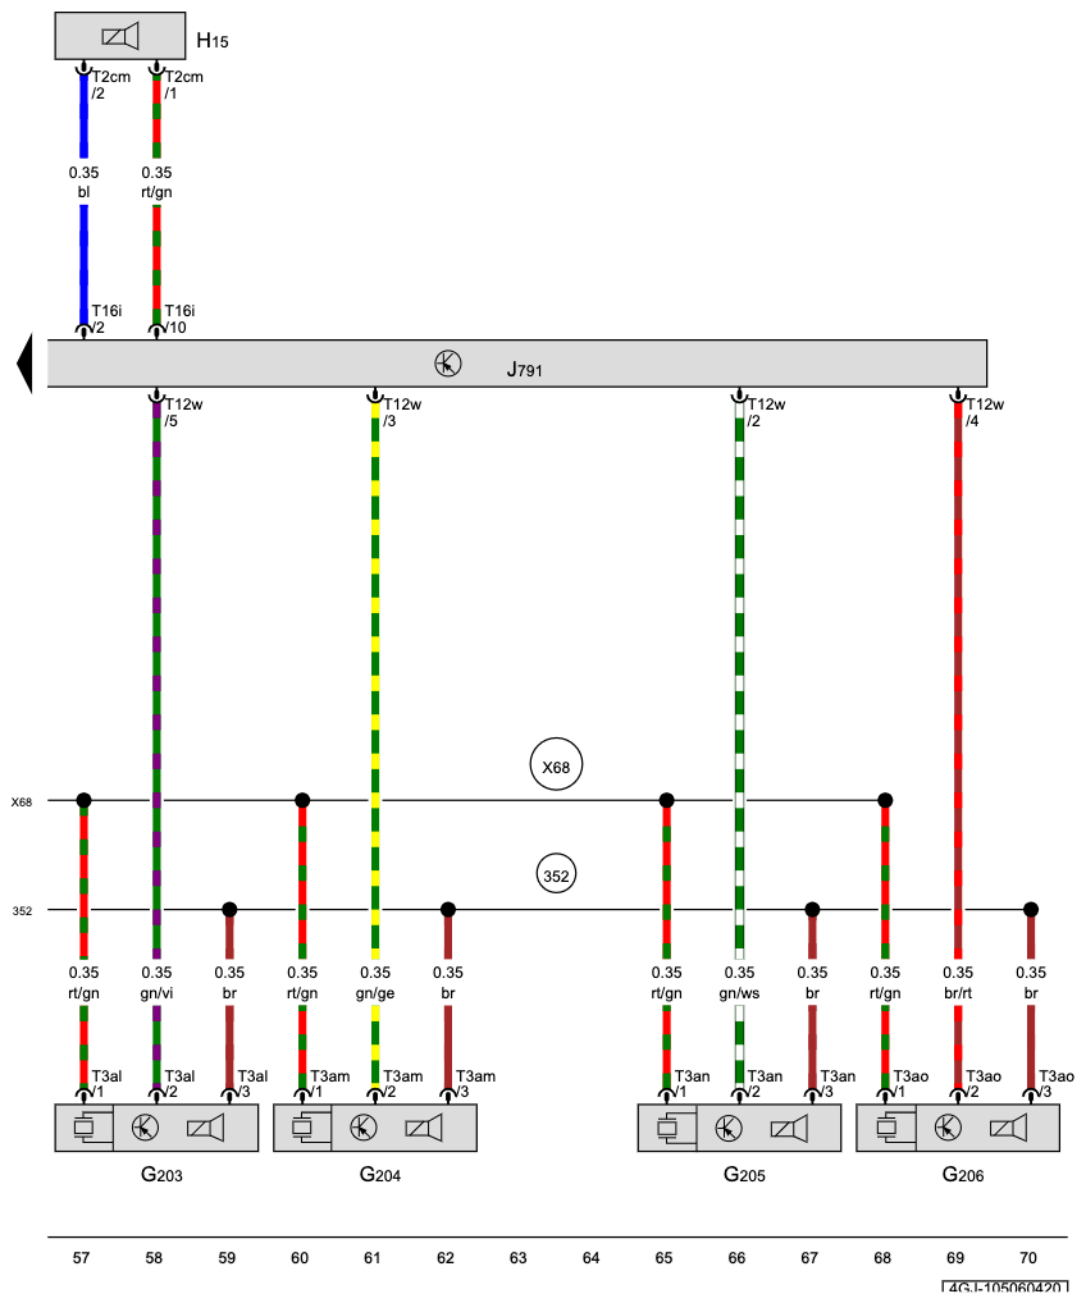

Left Rear Center Parking Aid Sensor, Right Rear Parking Aid Sensor, Rear Parking Aid Warning Buzzer, Parallel Parking Assistance Control Module

- G203 Left Rear Parking Aid Sensor
- G204 Left Rear Center Parking Aid Sensor
- G205 Right Rear Center Parking Aid Sensor
- G206 Right Rear Parking Aid Sensor
- H15 Rear Parking Aid Warning Buzzer
- J791 Parallel Parking Assistance Control Module
- T2cm 2-Pin Connector
- T3al 3-Pin Connector
- T3am 3-Pin Connector
- T3an 3-Pin Connector
- T3ao 3-Pin Connector
- T12w 12-Pin Connector
- T16i 16-Pin Connector

- 352 Parking Aid Ground Connection (in Rear Bumper Wiring Harness)
- X68 Parking Aid Connection (in Rear Bumper Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.